

For macOS -

PC oscilloscope software installation guide

i. software installation solution

i). full installation

Target user(s): general PC oscilloscope user(s), and programmer(s) gets secondary development need

Installation method -

To install both NI-VISA driver and PC software onto target PC.

- Note -

1. According to the version difference of macOS, the target PC requires suitable NI-VISA driver -
NI-VISA 20.0 supports macOS 10.15.x and macOS 10.14.x;
NI-VISA 19.0 supports macOS 10.14.x and macOS 10.13.x.
2. Different version NI-VISA driver available via -
visiting www.ni.com through web browser, type "NI-VISA" onto search column, click NI-VISA Download web linkage from searching results, in accordance with the PC operation system and its version, to choose preferred suitable NI-VISA version.

ii). minimum installation

Target user(s): PC oscilloscope user(s) who only need to communicate the device with PC via direct network cable (no requirements for USB communication)

Note: The user(s) may refer to [xiii.how to use socket connection](#) for "when the device communicates with PC by direct network cable" under VII. Device Operation from page 41 - 43 of the e-format user manual.

Installation method -

To install PC software onto target PC.

ii. software installation step

covering 2 parts: i). to install NI-VISA driver; ii). to install PC software


i). to install NI-VISA driver

under minimum installation solution, this part could be skipped


To copy "NI-VISA_19.0.0.dmg" from accompanying CD to the target PC,



double-click "NI-VISA_Full_19.0.0" (marked in red box) to start driver installation,

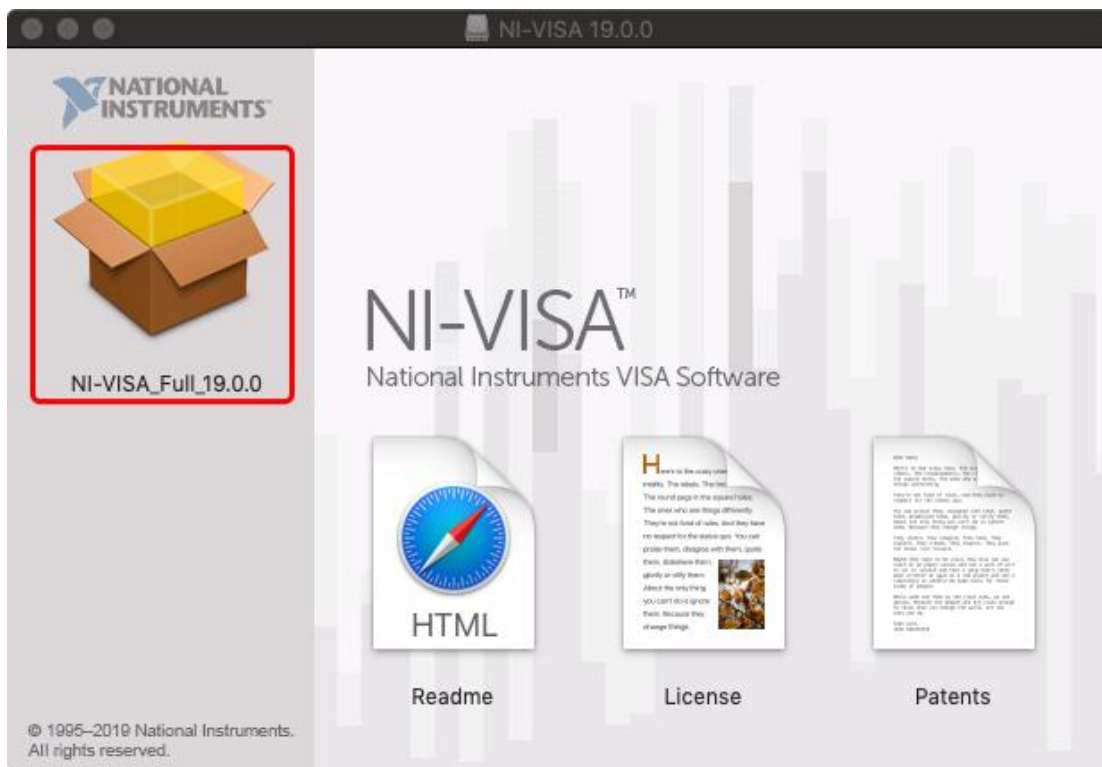


the “Introduction” window comes,

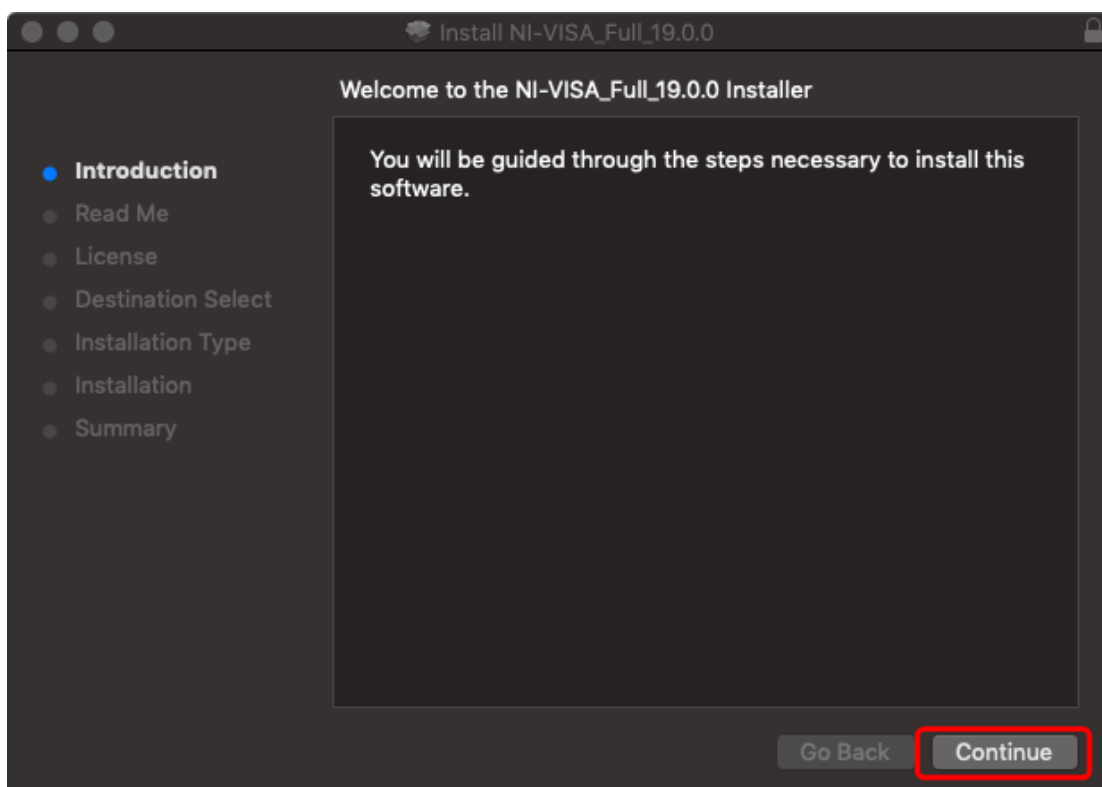


press “Continue”, to welcome “Read Me” window,




second “Continue” to enter into “License” window,

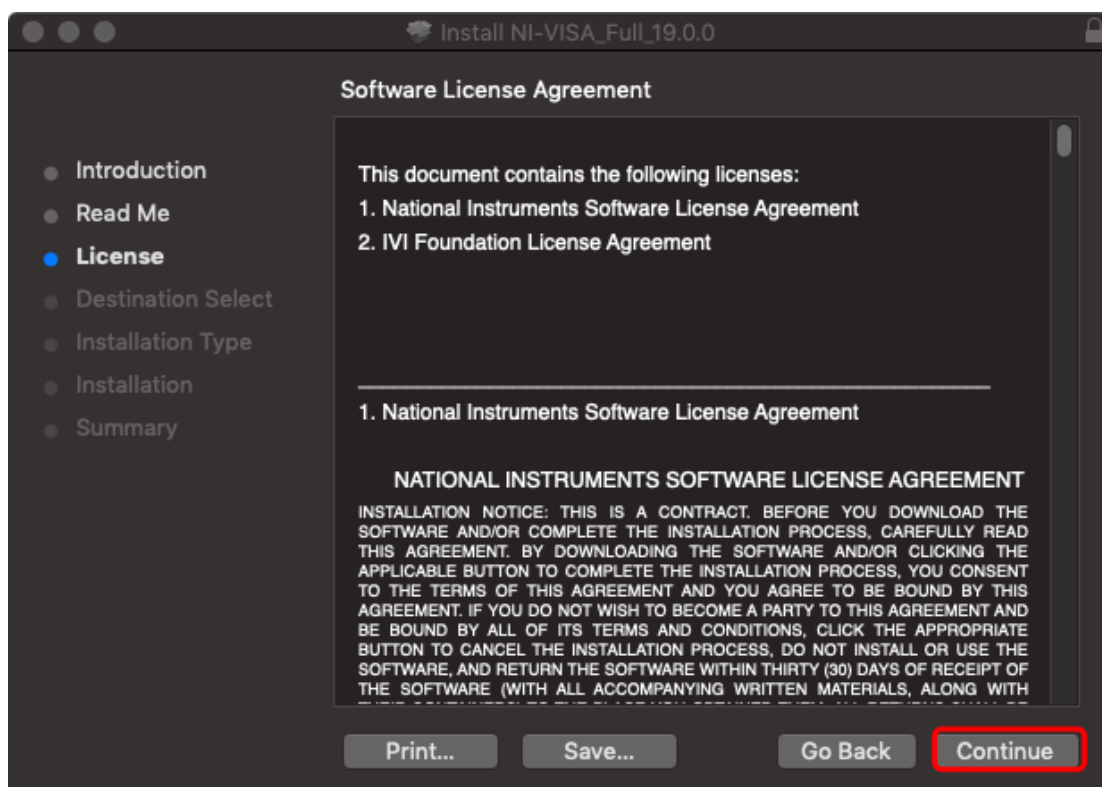

third “Continue”, when following window appears,

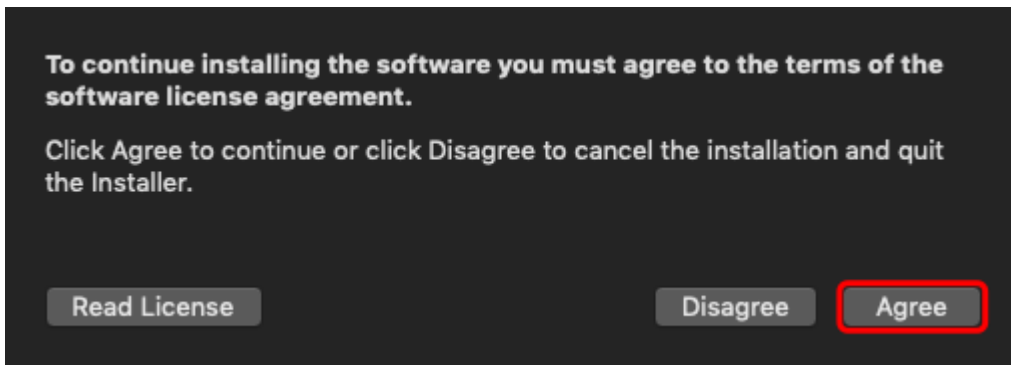


via "Agree" to "Installation Type" window,

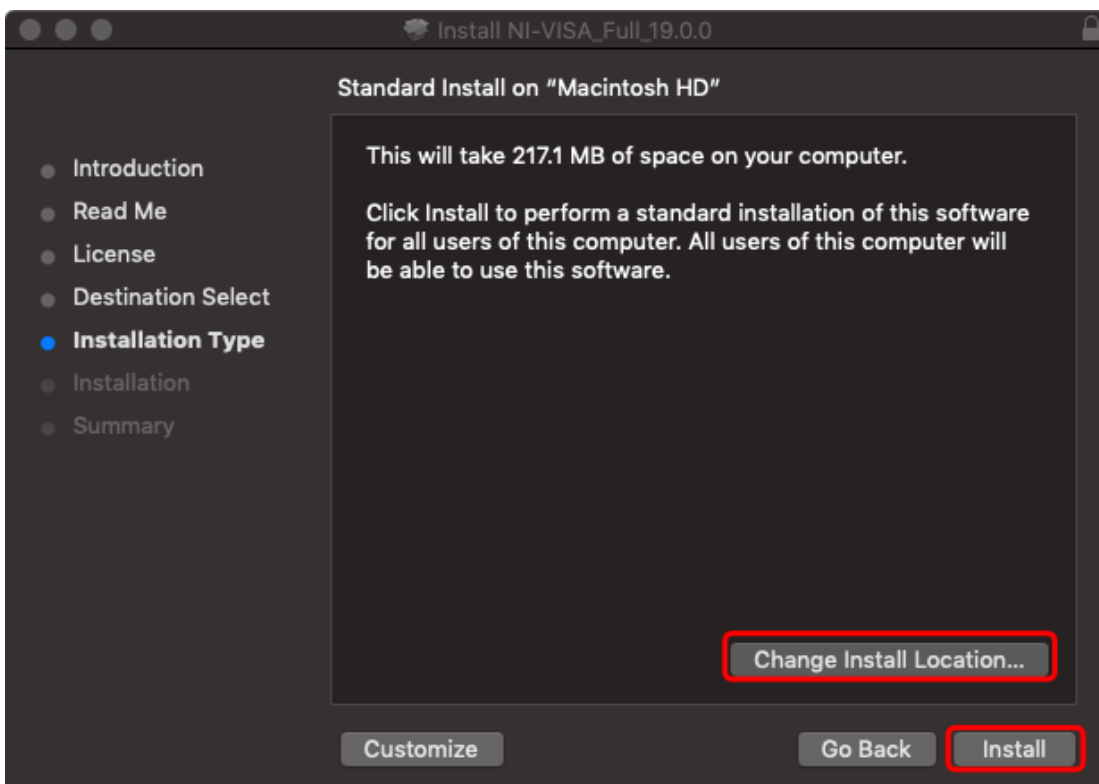


to change the driver installation position at "Change Install Location", then confirm it by pressing "Install",


when following window appears,

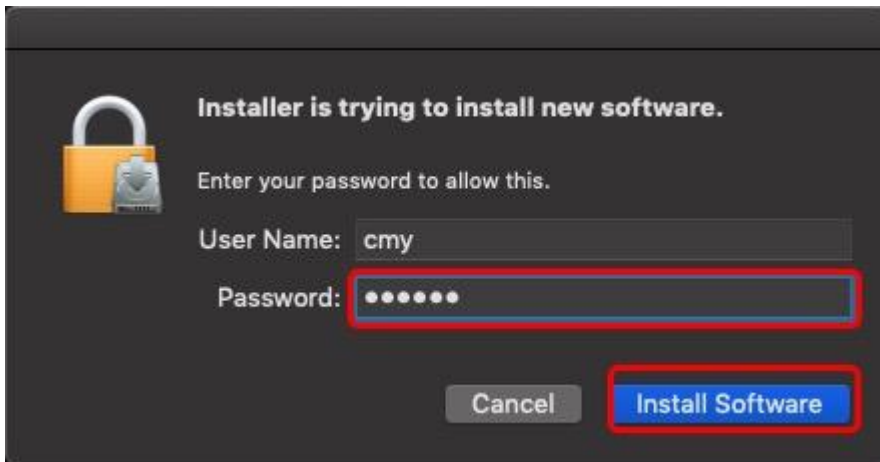


to fill the info.s after “User Name” and “Password” column, then check “Install Software”,
and “Continue Installation”,

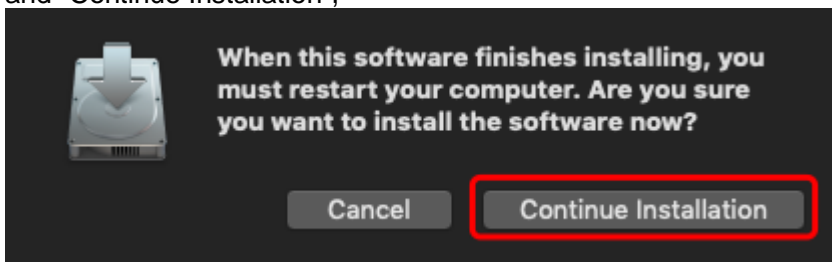

to get access to “Installation” window,

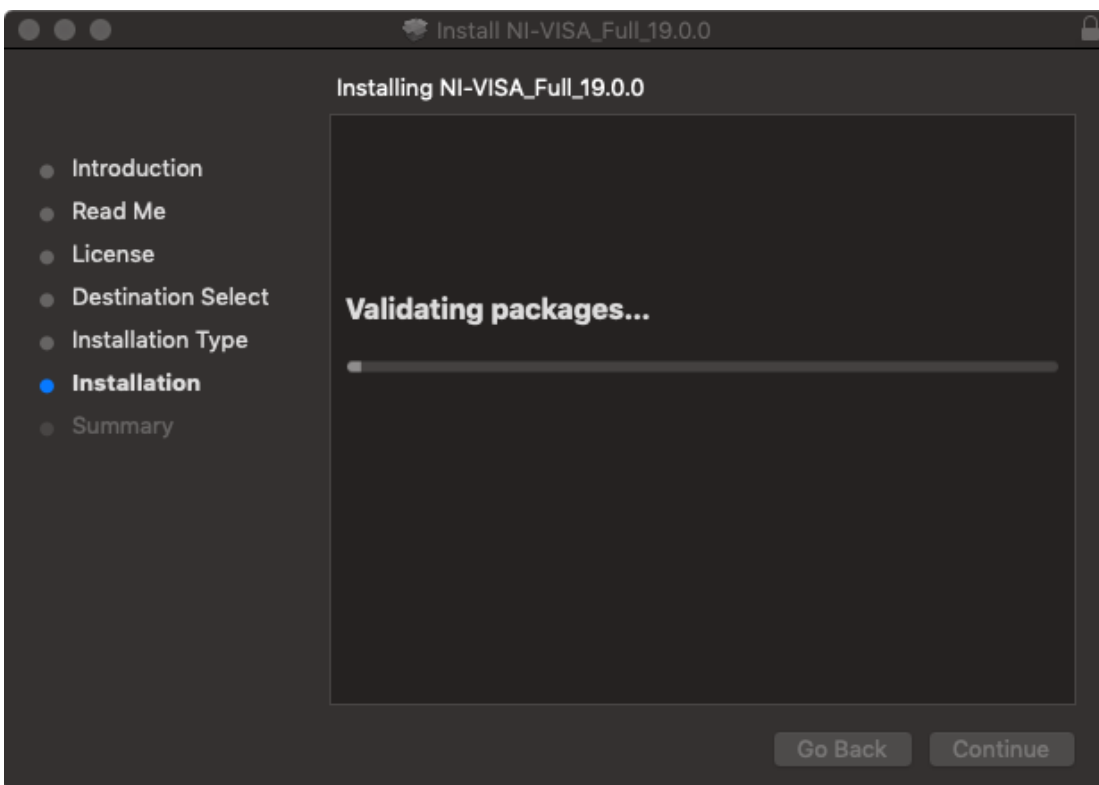

until this window,

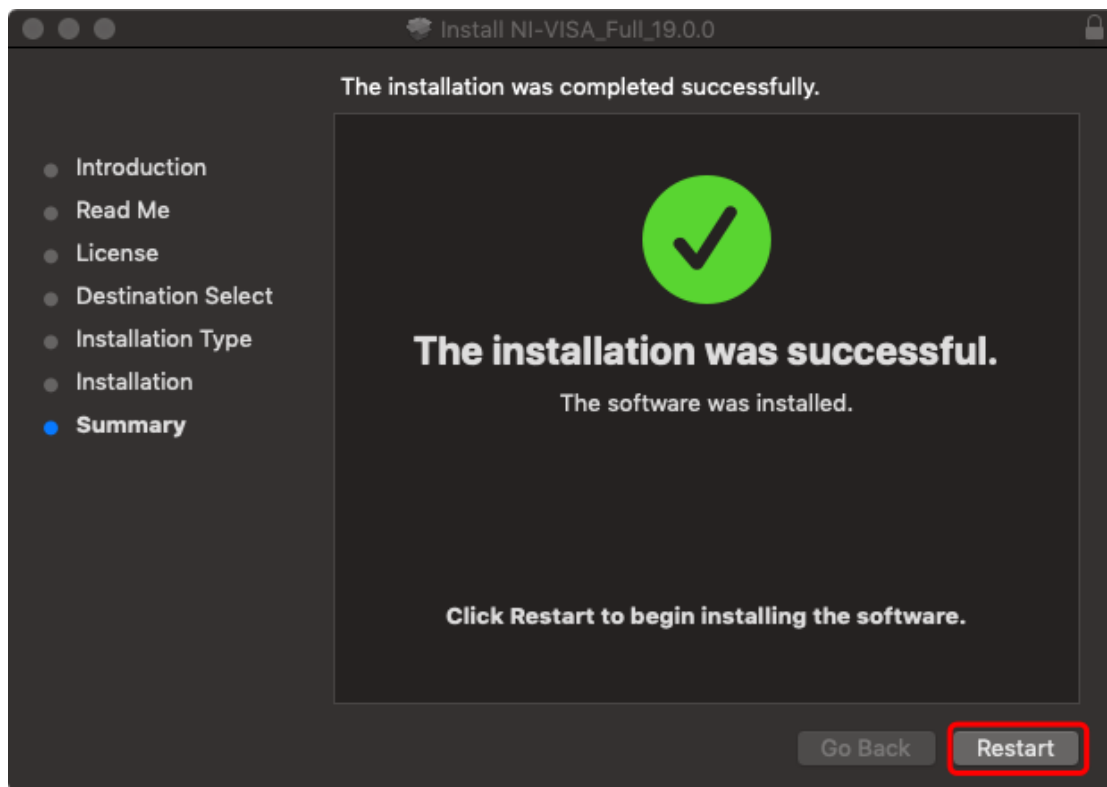


to restart the PC through mouse-clicking "Restart".

After PC restarts, the NI-VISA driver been installed onto target PC successfully.


ii). to install PC Software

To copy "PC-OSC.dmg" from accompanying CD to the target PC,

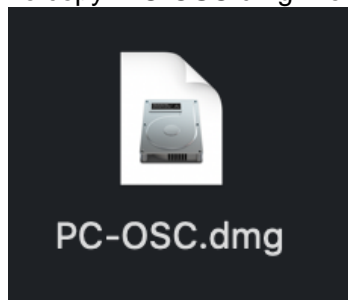

double-click "PC-OSC.dmg" to start PC software installation,

when this window comes,

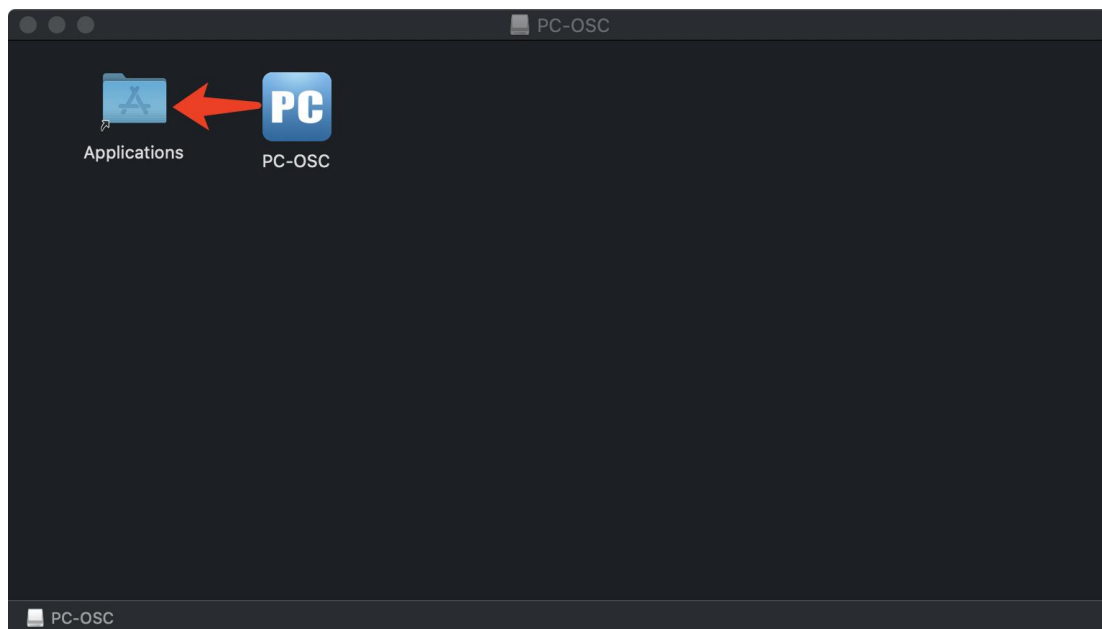

drag PC-OSC to Applications, to finish the PC software installation.

When running PC software in the near future, via “Macintosh HD”, to “Applications”, double-click “PC-OSC” will do.

